

BRENTWOOD CLASSICS


Custom Ottoman Program Leather Seam Placement

When upholstering in leather, seams are added in areas where single hides aren't large enough to cover.


This is a digital reference for seam placement and pattern placement could vary. Use dimensions for proper measurements as graphics may not be to scale.

Small Ottomans


24" x 24" | 32" x 26"

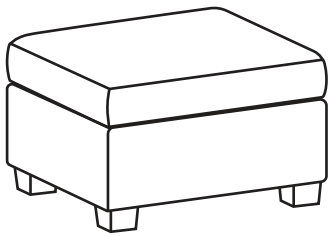

Square

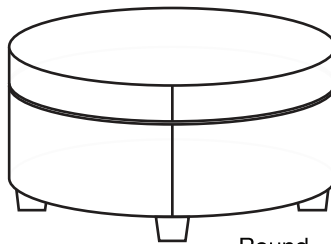


Round

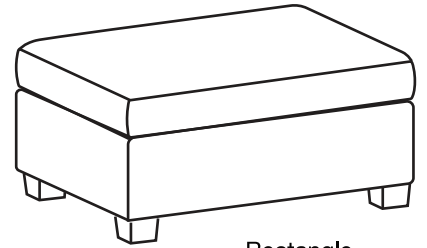


Rectangle

Medium Ottomans


32" x 32" | 38" x 28"

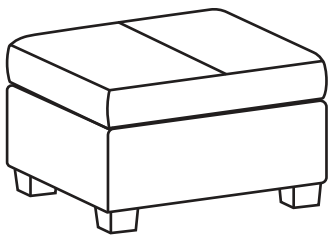

Square

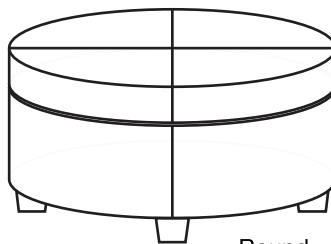


Round

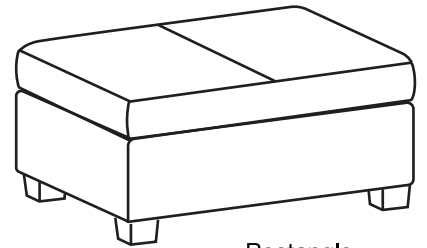


Rectangle

Large Ottomans


43" x 43" | 44" x 30"

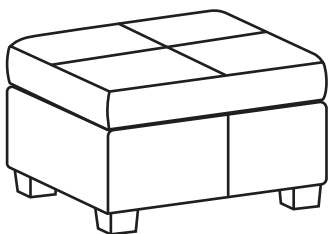

Square

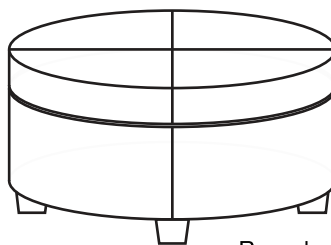

Round

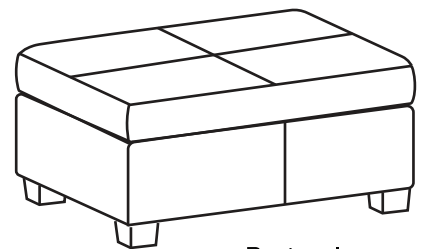

Rectangle